

© Arlo Technologies, Inc. Arlo, Arlo logo, and Every Angle Covered are trademarks of Arlo Technologies, Inc. App Store is a service mark of Apple Inc. Google Play and the Google Play logo are trademarks of Google LLC. Any other trademarks are for reference purposes.

Si ce produit est vendu au Canada, vous pouvez accéder à ce document en français canadien à arlo.com/docs.

(If this product is sold in Canada, you can access this document in Canadian French at arlo.com/docs.)

For regulatory compliance information including the EU Declaration of Conformity, visit www.arlo.com/about/regulatory/.

Arlo Technologies Intl. Ltd
Ground Floor, Building 3
University Technology Centre
Curraheen Road, Cork T12 EF21 Ireland

Arlo Technologies UK Limited
100 New Bridge Street
London, EC4V 6JA

Arlo Technologies, Inc.
2200 Faraday Avenue, Suite 150
Carlsbad, CA 92008 USA





June 2023



 
201-50699-01




Set up your Arlo Essential Outdoor Camera

1. Your camera arrives partially charged. For optimal performance, we recommend fully charging your device. The blue LED light will blink to indicate charging has started and remain off during charging. The LED light will be solid blue once the device is fully charged. This may take a few hours.
2. Download the latest version of the Arlo Secure App and sign in or create an account when prompted.
 
3. Turn on your phone's Bluetooth and open the Arlo Secure App. Press the pair button on your Essential Outdoor Camera. The app will walk you through setup and mounting.

What's in the box

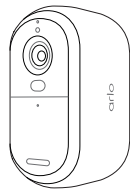


Arlo Essential Outdoor Camera

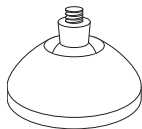 


Wall Mount



 Screw Kit




Indoor USB Charging Cable

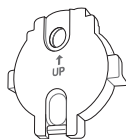 

Wall Plate

 Get to know your camera

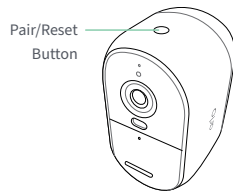

Pair/Reset
Button



Charging Port

Need help?

We are here for you.

Visit www.arlo.com/support for quick answers and:

- How-to videos
- Troubleshooting tips
- Additional support resources